

Custom

Faux Wood & Premium Wood Horizontal Blinds


- 2" Faux Wood Blind
- 2.5" Faux Wood Blind

- 2" Premium Wood Blind
- 2.5" Premium Wood

Measuring the right way for window treatments:


1. Determine the type of treatment installation.

Will you mount the treatment inside or outside the window casing?

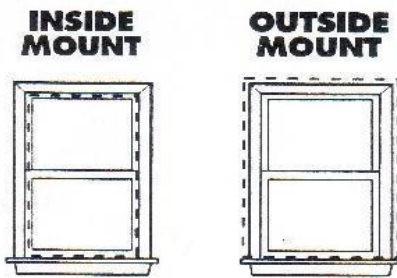


4. Measure the width of the window.

For inside mounts, don't make any deductions for clearance, this is done at the factory. Record the actual width of the window case opening.

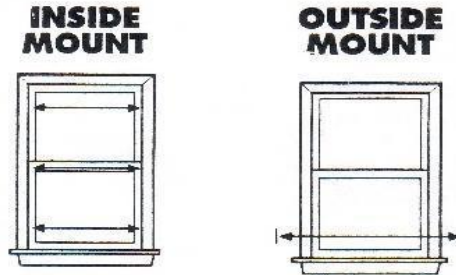

2. Always use a steel tape measure.

Record exact measurements. The factory takes allowances to get the best fit. Always record in the same order: width x height x depth. (The depth of your window casing may influence your product selection.)

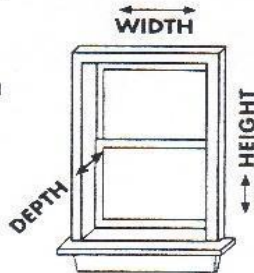


Measure width at top, middle and bottom of window. Write down the narrowest measurement (round down to an even 1/8").

Measure 3-4" past the edge of the moulding to allow for privacy.

5. Measure the height of the window.

For inside mounts, don't make any deductions for clearance, this is done at the factory.

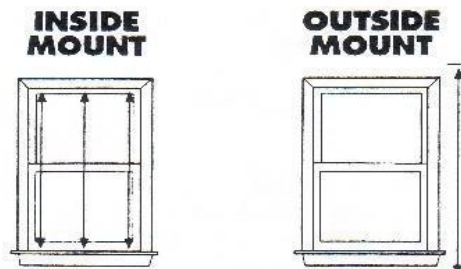

Measure height at left, middle and right of window. Write down the longest measurement (round up to an even 1/8").

Measure height 2" above and 2" below window. Cellular/pleated shades add 1/2"; roller shades/silhouettes add 1". Measurement may be adjusted longer to your preference.

3. Check the casing depth.

Ask us for product specifications for inside mount. For example,

2" blinds=2 1/2" depth

Note: Measure from the window "stop" to the front of the casing.

Comments:
